


# Roof Top Tent

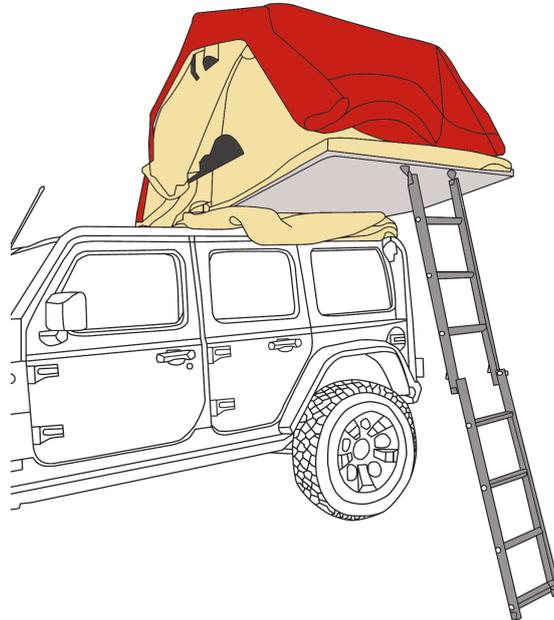

This Roof Top Tent is designed to mount on most OE and aftermarket roof rack/crossbar systems. Consult your owner's manual for weight restrictions.

Place tent and tent base with holes face up on a clean, protected surface. Slightly open up tent, open up entrance and remove all parts from the interior of the tent.

## **Direction of Opening**

Before you fit your new Roof Top Tent to your vehicle, determine which side of the vehicle you want your tent to open. **Read instructions thoroughly before assembling and installing this product. Product may vary from image. Periodically check torque of all hardware.**

## Components

1. Roof Top Tent.....	(1)	12.M6 x 18mm Hex Bolt.....	(2)
2. Window Rod.....	(8)	13.M6 Flat Washer.....	(16)
3. Aluminum Rails.....	(2)	14.M6 Nylock Nut.....	(10)
4. Ladder Mounting Bracket.....	(2)	15.M6 Plastic Washer.....	(4)
5. Ladder.....	(1)	16.Shoe Bag.....	(1)
6. Slide Plate.....	(8)	17.Tent Cover.....	(1)
7. Base Plate.....	(4)		
8. M8 x 55mm Bolt.....	(8)		
9. M8 Flat Washer.....	(8)		
10. M8 Nylock Nut.....	(8)		
11. M6 x 40mm Hex Bolt.....	(8)		

### OMIX-ADA® TECHNICAL SUPPORT

PHONE: M-F 8am - 5pm EST 1-800-449-6649 | EMAIL: techsupport@omix-ada.com

FOR WARRANTY INFORMATION VISIT: [www.Omix-Ada.com](http://www.Omix-Ada.com)




OMIX-ADA, Inc.

460 HORIZON DR. SUITE 400 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com


# Roof Top Tent

1. Lay the tent on its side on the ground. Using the supplied M6 bolts and washers, lift the mattress and insert the bolts into the pre-drilled holes. Align the aluminum rails with the previously installed M6 bolts through the floor. Slide the M6 nuts into the track and tighten the bolts from inside the tent. **Do not over tighten hardware.**

**Tech Tip:** We recommend using a blanket or tarp when placing the tent on the ground to keep the tent clean.

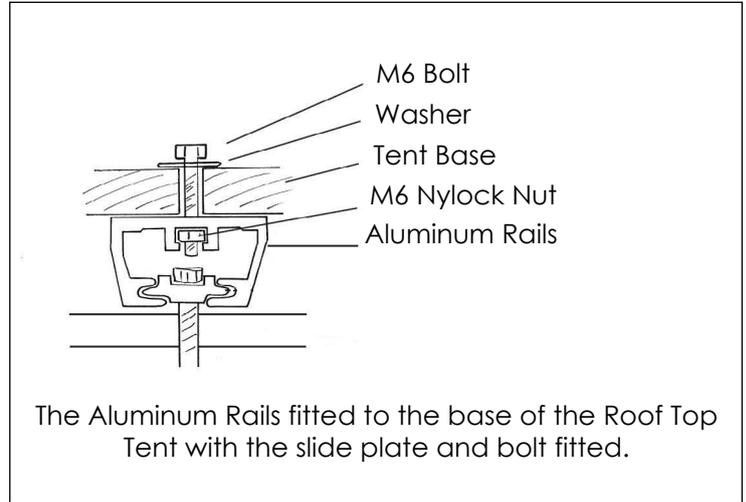


2. Attach ladder brackets to the base of the tent using M6 bolts. Bolt each ladder bracket to the base of the tent through the pre-drilled holes.

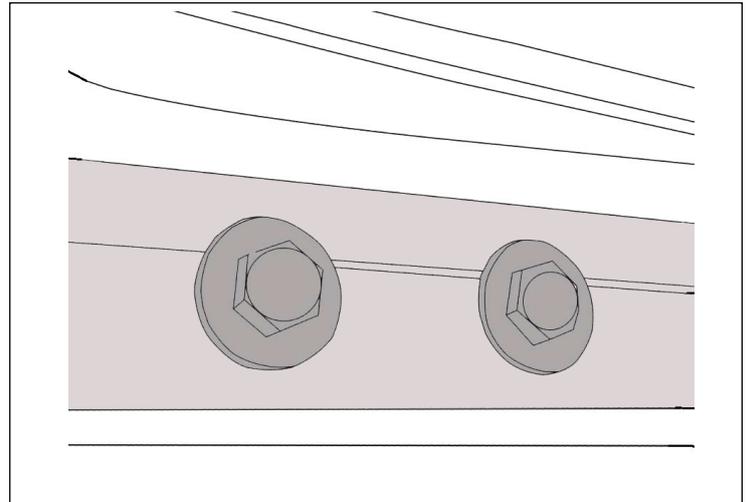

3. Mount the ladder brackets to the ladder using the supplied M6 bolts, washers, plastic washers, and nut. Plastic washers will go on both sides of the bracket on the ladder. **Do not over tighten bolts, there should be a slight resistance when rotating the ladder.**

**Tech Tip:** Thread locker is recommended for these bolts as an extra measure for vibration resistance.

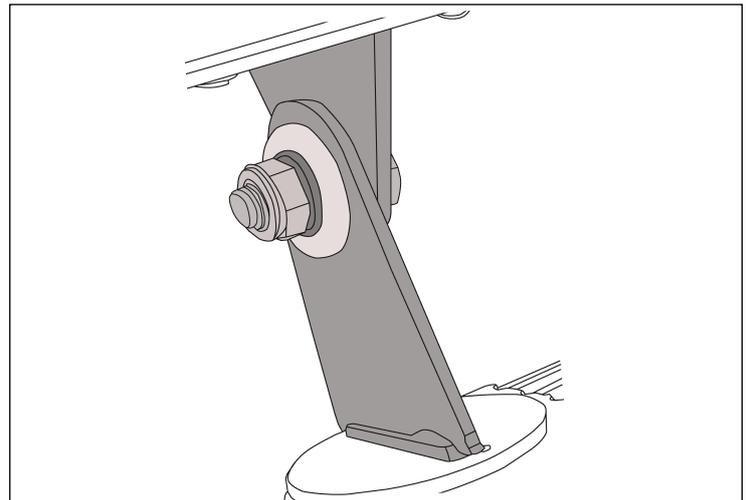




OMIX-ADA, Inc.

460 HORIZON DR. SUITE 400 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

# Roof Top Tent


4. With help, carefully lift the tent onto the vehicle. Insert M8 bolts into the slide plate. Slide the plate and bolt into the aluminum rails. Bolts should be located on either side of the cross bars. Slide two plates from the rear and one from the front, ensuring there are 4 per rail when complete.

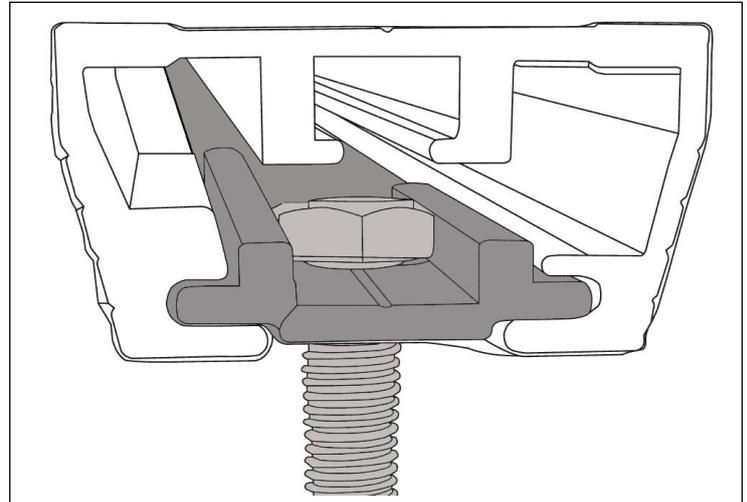


5. Secure the rooftop tent to your roof rack or roof bars. Use 2 M8 bolts and 2 slide plates with the base plate to secure the bar. If the cross bars are too far apart the center will not be properly supported and may be damaged.

**Do not over tighten nuts because this will cause the bolt head to strip the aluminum slide plate.**

**Periodically check torque of all hardware.**

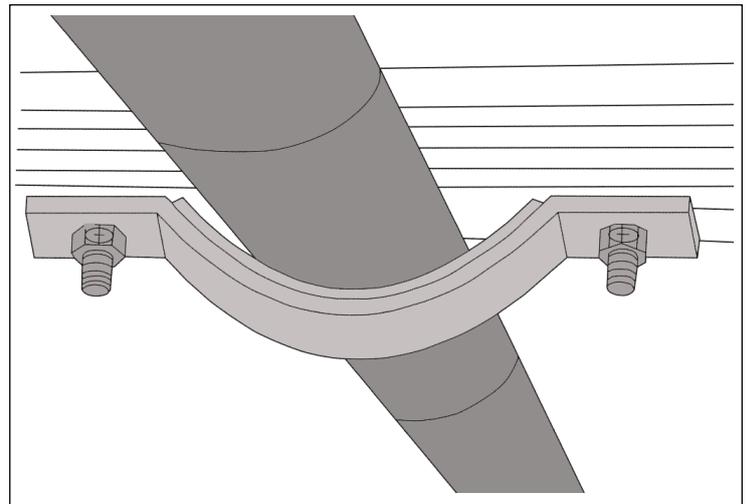

6. Release the hook and loop straps on all sides of the tent.

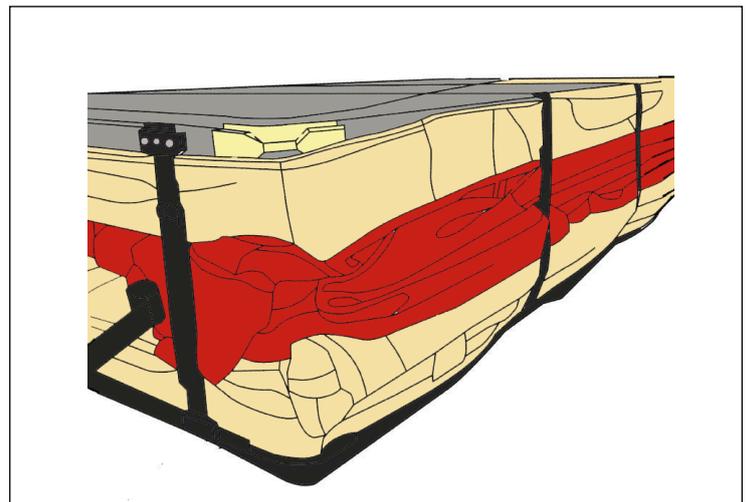




OMIX-ADA, Inc.

460 HORIZON DR. SUITE 400 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

# Roof Top Tent

7. Carefully extend the ladder until it clicks into place. Springs should engage.

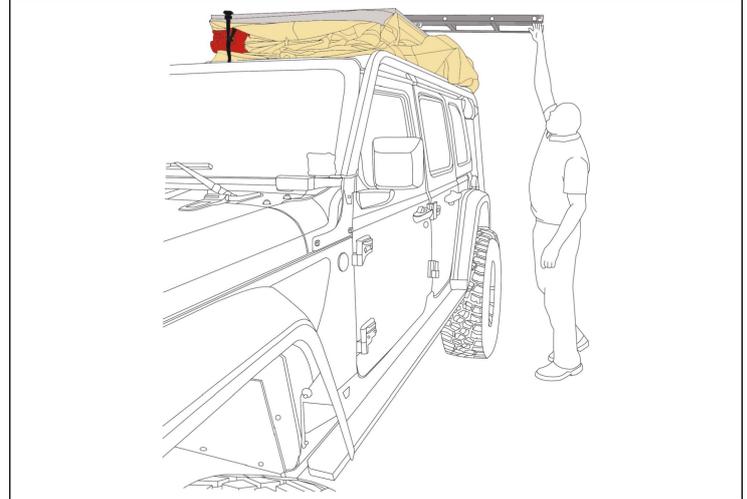

8. Use the ladder as leverage to open the tent, carefully folding it to the open position.



9. Allow the ladder to rest on the ground. If the ladder is extended too far it will need to be adjusted. (See next step) The ladder should be at a slight angle so it can support the tent while open.






OMIX-ADA, Inc.

460 HORIZON DR. SUITE 400 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com


# Roof Top Tent

10. The ladder features several adjustment holes. Additional holes may be drilled if needed. Do not drill holes below the bottom pre-drilled hole.


**Tech Tip:** Use a 3/8" drill bit to drill new adjustment holes.

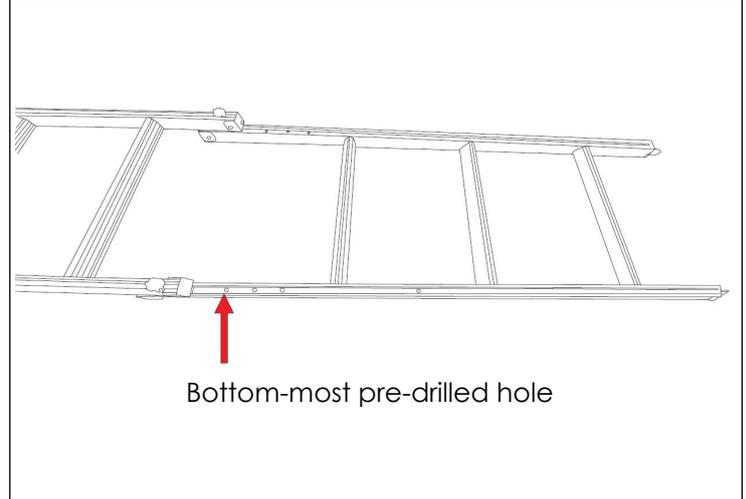

11. To lock the knobs into the open position, pull the knob up and turn it 1/4 turn. To unlock, turn another 1/4 turn. This will engage the spring.

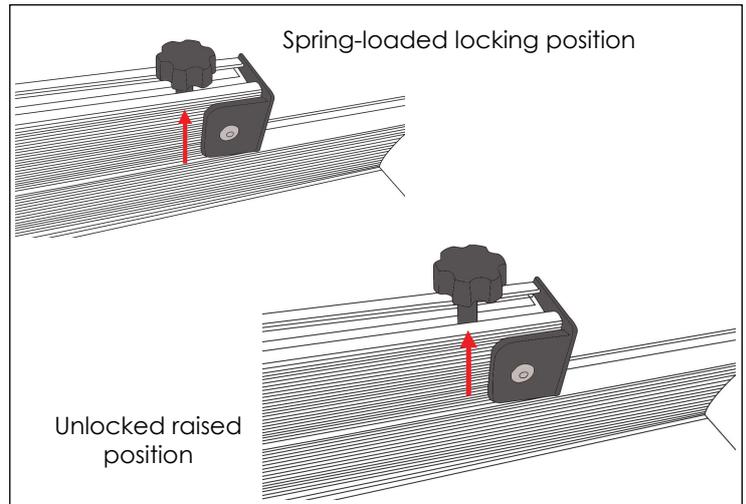

12. To install the tent flap rods, locate the slots on the base of the tent flap and insert the rods into the pre-drilled holes. Ensure the rods are inserted completely.

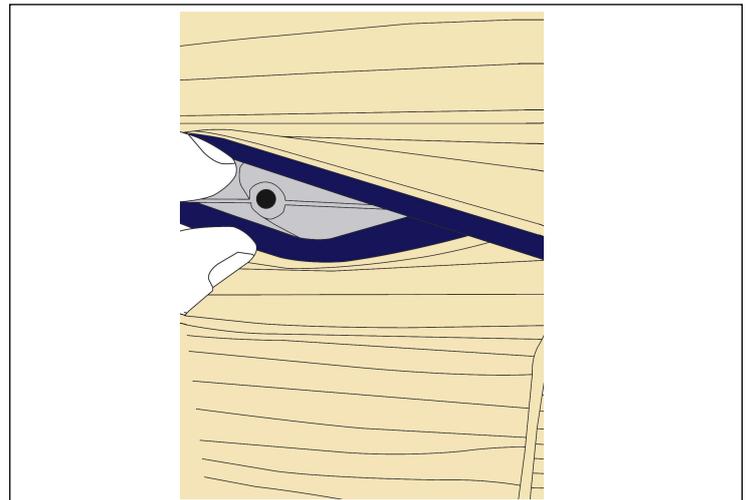




OMIX-ADA, Inc.

460 HORIZON DR. SUITE 400 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

## Roof Top Tent

13. Place the hook end of the rod through the grommet on rain/shade cover with the hook part facing outward and downward.

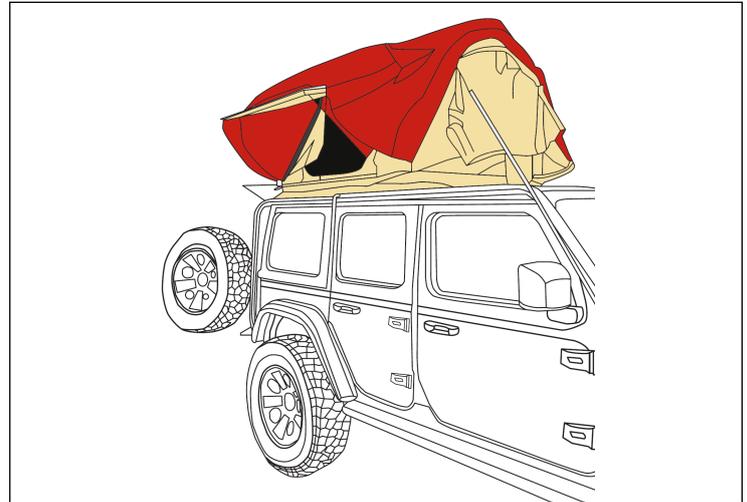

### **Storage and Handling Guidelines Cautions**

- Do not store the tent wet.
- Adding a tent increases the height of your vehicle and alters its center of gravity. Use caution.
- Periodically ensure all nuts and bolts are attached and are tight. Failure to follow these instructions will void the warranty.

### **Care Instructions**

- Clean only with cold water and a soft brush - do not use soap or detergent, this will remove the waterproofing compounds.
- Do not expose to petrol, oil or solvents.